


HOW TO MEASURE FOR A HINGE DOOR WITH FULL HEIGHT INLINE AND RETURN PANELS

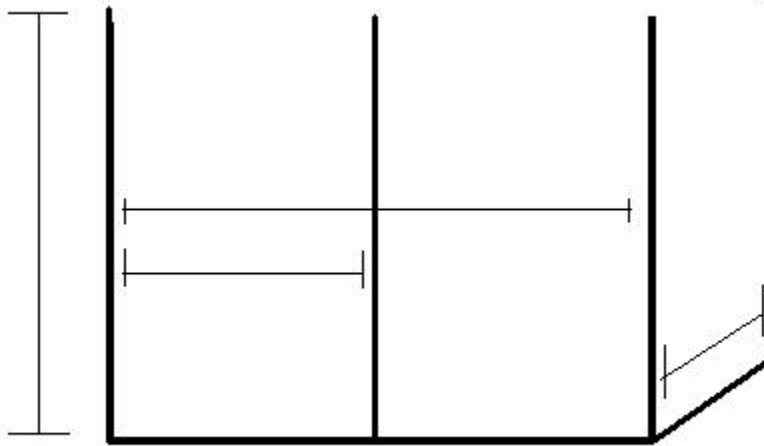

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO CENTER OF RETURN THRESHOLD AT TOP, MIDDLE, AND BOTTOM.

PROVIDE DESIRED WIDTH OF DOOR, NOT TO EXCEED 36",

OR

PROVIDE DESIRED WIDTH OF PANEL, NOT LESS THAN 7".

OTHERWISE

DOOR WILL BE MADE TO A STANDARD SIZE.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

MEASURE RETURN PANEL FROM BACK WALL TO CENTER OF THRESHOLD, PANEL TO BE BETWEEN 7" – 36".

PROVIDE HINGE LOCATION
(EITHER LEFT OR RIGHT, OFF WALL, OFF INLINE, OR OFF RETURN).

THIS UNIT IS NOT AVAILABLE USING A PIVOT DOOR.