


HOW TO MEASURE FOR A SWING OUT DOOR WITH FULL HEIGHT RETURN PANEL

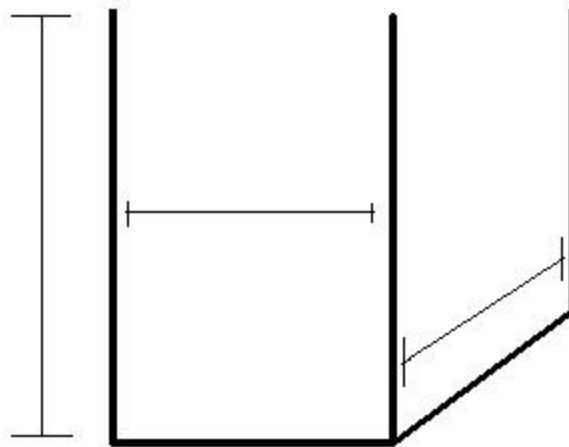

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO CENTERLINE OF RETURN THRESHOLD AT TOP, MIDDLE, AND BOTTOM.

MEASURE DEPTH OF RETURN PANEL FROM BACK WALL TO CENTER OF THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

PROVIDE HINGE LOCATION
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).